

nut covers & starter kits



CHROME PLASTIC NUT COVERS

PART NO.	DESCRIPTION
101-NC	1-1/2" Standard Chrome
102-NC	1-1/2" Bell Chrome
103-NC	33mm Bell Chrome
103-2-NC	33mm with Tall Washer
104-NC	33mm King Crown Chrome
105-NC	1-1/4" Standard Chrome
106-NC	1" Standard Chrome
107-NC	15/16" Standard Chrome
108-NC	13/16" Standard Chrome
109-NC	3/4" Standard Chrome
110-NC	18mm Chrome
111-NC	9/16" Standard Chrome
112-NC	7/16" Standard Chrome
113-NC	1/2" Standard Chrome




STARTER KITS

Peterbilt Starter Kits

Require 2 sets to complete 1 frame.


PBHR	Huck Rivet Top Hat	Contains 44 126-NC and 4 114-NC
PBBS	Peterbilt Bullet	Contains 44 107-NC and 4 109-NC
PBTH	Peterbilt Top Hat	Contains 44 116-NC and 4 114-NC
PBTXL	Texas Look	Contains 44 117-NC, 44 301-HO and 4 114-NC

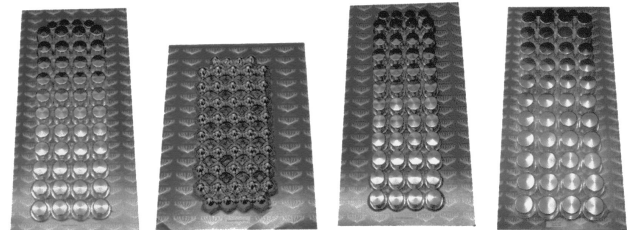

Freightliner Starter Kit


Require 2 sets to complete 1 frame.

FLSC	Freightliner Starter Kit	Contains 20 118-NC, 4 125-NC, 20 116-NC, 10 115-NC
------	--------------------------	--

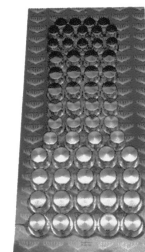

Kenworth Starter Kits

KW2UP	2002 Kenworth Starter Kit	Contains 12 126-NC, 24 115-NC, 23 116-NC, and 1 122-NC
KW9801	1998-2001 Kenworth Starter Kit	Contains 16 116-NC, 10 115-NC, 11 126-NC, and 4 114-NC
KW970	1997 & Older Kenworth Starter Kit	Contains 12 116-NC, 30 115-NC, and 4 126-NC

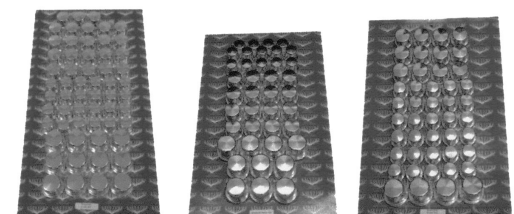

NUT COVER PULLER

PART NO.
IT-295



DESCRIPTION
1-1/2" Lug Nut Puller

CHROME AIR CLEANER SCREW

PART NO.
97450



DESCRIPTION
Chrome Air Cleaner Screw