

Part No.

- 30565 Key trim
- 30569 Roadmaster Key Trim
- 30442 379 Door Latch Trim
- 30449 Flame Door Latch Cover
- 30562 Comet Key Hole Trim
- 30155 Sleeper Handle
- 30580 2005 & Up Latch Keyhole Cover
- 30581 Latch Keyhole Surrounds 2005 & Up




30565



30569



30442

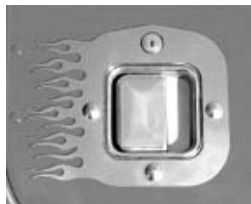

30449



30562




30155




30580 & 30581

Part No.


- 30118 359/379 Vent Trim, Vent Cover
- 30097 359/379 Vent Trim, Vent Cover
- 30104 Sleeper Shock Cover
- 30150 Flame Window Trim
- 30153 Sleeper Trim Flames
- 30430 359/379 Window Deflector
- 30149 Upper Door Trim 379
- 30141 Sleeper Light Trim

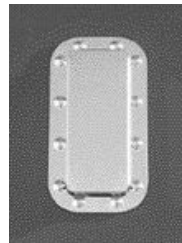

30118 & 30097

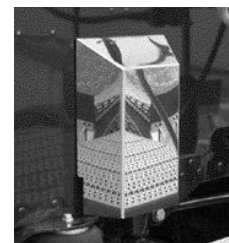


30104

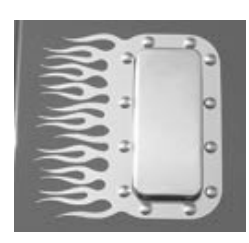

30153



30430

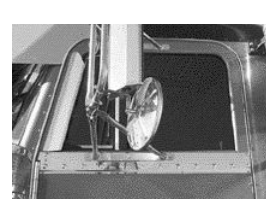


30149




30141

Part No.

- 30148 Sleeper/Day Cab Rear Window Trim
- 35400 Sleeper/Day Cab Rear Window Visor
- 35450 Sleeper/Day Cab Louvre Shade
- 30062 Rear Frame Cover
- 30161 63" Stand-Up Sleeper with Flat Top Cab (3 Pc. Kit)
- 30163 63" Stand-Up Sleeper with UltraCab (3 Pc. Kit)
- 30164 70" UltraSleeper (3 Pc. Kit)
- 30601 12 Inch Center Panel

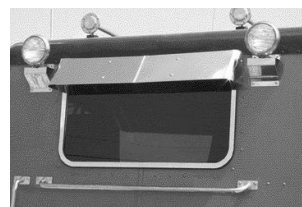

30148 & 35400

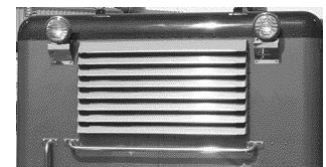

35450



30062



30161, 63, 64



30601